


# Mountain View Wood Works

## Belt Loop Plaque Assembly Instructions

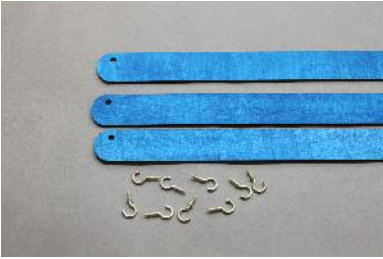

1. Locate hardware and Belt Loop Strips. You should have 3 strips and 9 cup hooks.



6. Repeat these steps to install the remaining 8 cup hooks.



2. Locate the 9 pre-drilled holes in the face of your Belt Loop Plaque.



7. Slide the belt loops onto the Belt Loop Strips making sure the holes are at the top.



3. Thread a cup hook into each pre drilled hole rotating clockwise.



8. Arrange the belt loops (not included) on the Belt Loop Strips to your liking.



4. Continue tightening the cup hook until the shoulder touches the face of your plaque.



9. Turn strip upside-down and align the holes on the strip with the hooks on the plaque.



5. To align open end of cup hook to the top of the plaque, back out the cup hook. Do not over tighten.



10. Rotate the strip down so that all three hooks are securing the strip to the plaque.